

AIR BATH OPERATING INSTRUCTIONS

- No routine maintenance is required for air tubs. The 300 watt heater inside blower is automatic it comes on every time you use your air bath system to continuously heat the air.
- Push button on-off cycles the blower through speeds
- Auto Purge runs blower after each use for 20 minutes. See below.
- 20 minute timed delay on auto purge- this means that after you have drained your air bath, it will automatically turn the blower on after 20 minutes to purge any remaining water in the system. (PLEASE NOTE: IF YOU TURN THIS AUTO PURGE OFF WHILE IT IS TRYING TO PERFORM IT'S PURGE, IT WILL AUTOMATICALLY RESET AND TRY TO PURGE AGAIN IN 20 MINUTES, AND WILL KEEP DOING THIS EVERY TIME YOU TURN IT OFF UNTIL THE PURGE HAS COMPLETED!) So, let it run it's full cycle until it is complete!